



HA360BCA – Baby Cry Alerting System

Setting Up Your HomeAware® II Main Unit for the First Time

Remove all contents of the box. (HA360M-II - Main Unit, HA360V-II - Bed Shaker, HA360BDB – Blink Doorbell, HA360SSBCK Baby Cry, and Quick Start Guide)

Plugging in Your Main Unit and Connecting the Bed Shaker

1. Remove the back cover: Press down as shown in **Image 1**. (**Note:** this may require significant force the first time).
2. Connect the bed shaker: Plug the bed shaker cable into the BED SHAKER 5V port (**Image 2**).
3. Connect power: Plug the power cable into the DC IN port (**Image 2**).
4. Plug into the outlet: Insert the power supply into a 120V outlet.
5. Reattach the cover: Lift the unit to clear the cables, place the cover flush against the cavity, and press up as indicated in (**Image 3**).
6. Verify installation: Ensure the cover is fully seated as shown in **Image 4**.

Image 1



Image 2



Image 3



Image 4



Installing the Rechargeable Battery

1. Remove the battery cover: Slide the cover open while lifting the tab with your thumb, as shown in **Image 1** (a screwdriver can assist).
2. Access the battery: Remove the cover to reveal the Li-ion battery (**Image 2**).
3. Plug in the battery: Connect the battery cable (**Image 3**). Tip: Remove the battery from the compartment first for easier access (needle-nose pliers can help).
4. Position the battery: Place the battery back into the compartment and tuck any excess wire into the gap (**Image 4**).
5. Align the cover: Place the cover over the battery about a quarter-inch from the fully closed position (**Image 5**).
6. Secure the cover: Press down while sliding the cover to the right so the nubs engage the holes, until the left tab snaps into place (**Image 6**).

Image 1



Image 2



Image 3

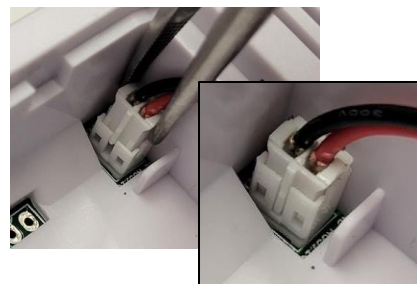


Image 4

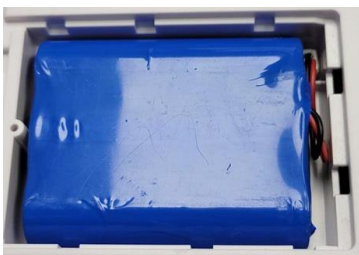


Image 5



Image 6



For additional information refer to the user guides provided or sonicalert.com.

Setting the Time of Day

Note: The time can also be set using the HomeAware® App. If you prefer to use this method, please skip this section and refer to the HomeAware® App instructions below.

1. Press the **TIME SET** button on your HomeAware® II Main Unit (**Image 1**). Blinking red dots shown on the display indicate time set mode has been activated.
2. Press the blue **HOUR** buttons up or down and the blue **MINUTES** buttons up or down to set the desired time (**Image 2**). **Note:** The PM indicator is located on the top left-hand side of the screen.
3. Press the **ENTER** button when you are done (**Image 3**). The display dots will stop blinking to indicate the time has been set.

Image 1



Image 2

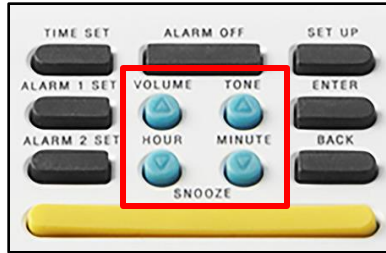


Image 3



Testing Your SMOKE and CO Alerts

Note: It is important to test your smoke alarms/CO detectors **weekly** to confirm that they continue to correctly trigger the main unit. Confirm that the strobe, bed shaker, audio, and visual alerts are all operating correctly.

To test for the first time:

1. Verify that your HomeAware® II Main Unit and smoke alarm or carbon monoxide detector are installed in their permanent, everyday locations.
2. Test your smoke alarm or carbon monoxide detector using your manufacturer's instructions.
3. Ensure your smoke alarm or CO detector displays SMOKE or CO, verifying that it "heard" the alarm.
4. If your main unit does not display SMOKE or CO, check that no objects are between the alarm and your main unit, and try again.
5. If it is still not triggering, refer to the HomeAware® II user guide included in your box (also available on sonicalert.com) for instructions on how to modify your device's sensitivity settings.

HomeAware® App Installation & Setup Guide

Note: The HomeAware® App is required to receive incoming phone call/text alerts on your smartphone, manage firmware updates, or use the HomeAware® II Subscription Service. It is not required for the smoke and carbon monoxide (CO) alert functions on the HA360M-II Main Unit.

Download HomeAware® App & Initial Permissions

1. Download the App: Open the Apple App Store® (iOS) or Google Play™ Store (Android) on your smartphone and search for "HomeAware". The correct app will have the house icon shown below. Follow the instructions to install it (**Image 1**).
2. Open the App & Grant Permissions:
 - When prompted Allow "HomeAware" to find Bluetooth devices?, tap **Allow** (**Image 2**).
 - When prompted "HomeAware" would like to send you notifications", tap **Allow** (**Image 3**).

Image 1



Image 2


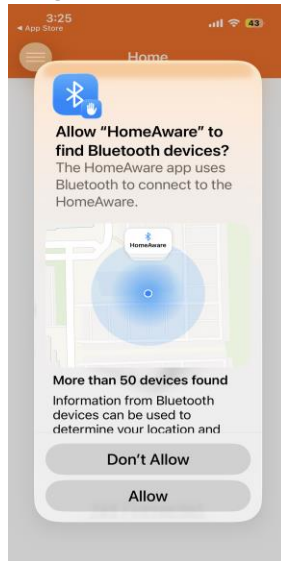


Image 3

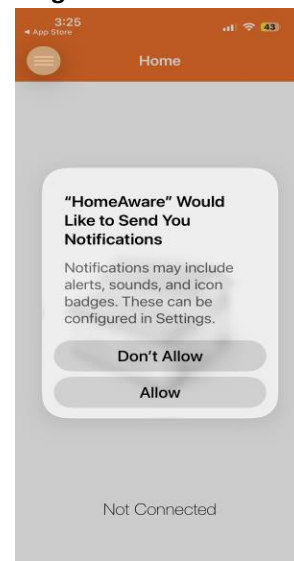

Pairing Your Smartphone

1. Pairing: Tap **Pair with your HomeAware®** inside the app (**Image 1**).
2. Initiate Pairing and Linking: Follow steps and tap **OK** (**Image 2**).
3. Confirm Bluetooth Pairing Request: Follow the instructions on the screen to confirm the code and tap **Pair** (**Image 3**).
4. Enable System Notifications: Tap **Allow** (**Image 4**).

Your phone is now connected. The red BT indicator light will turn on and stay lit on your main unit. You will now receive notifications for calls, texts, and emails on your main unit and HomeAware® alerts directly on your phone.

Image 1

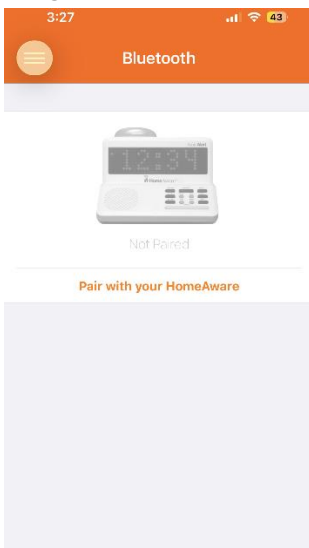


Image 2

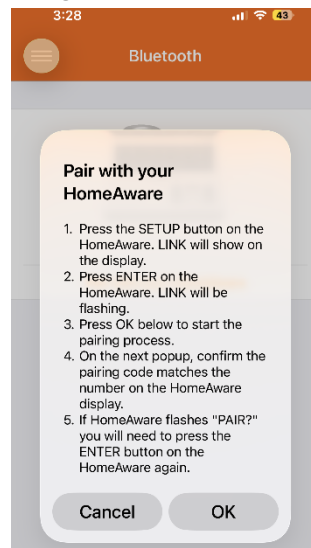


Image 3


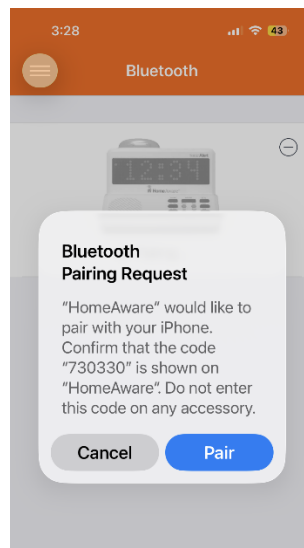


Image 4

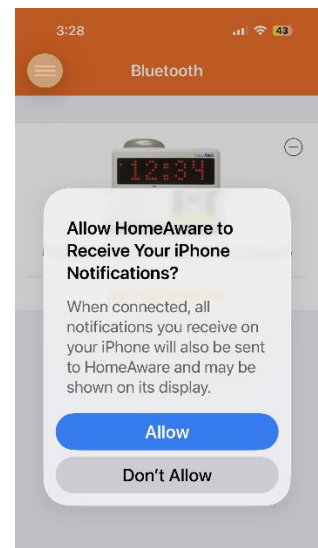

For additional information refer to the user guides provided or sonicalert.com.

Updating Firmware (If Prompted)

Note: Periodic firmware updates will be sent to your main unit to ensure your device is up-to-date and performing optimally. All updates must be initiated through your app.

1. Tap **Start Update (Image 1)**.
2. Your app will show you how the update is progressing and let you know when it is completed (**Image 2**). **Note:** Your main unit's display will also show the update progress and display **DONE** when completed.

Image 1


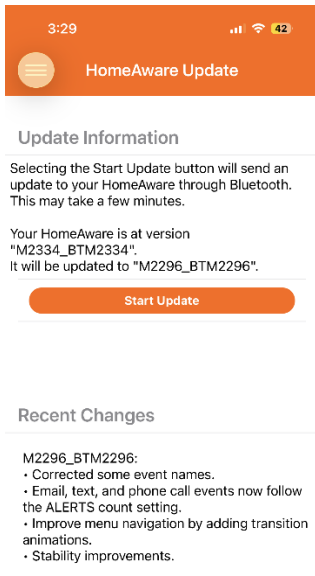


Image 2

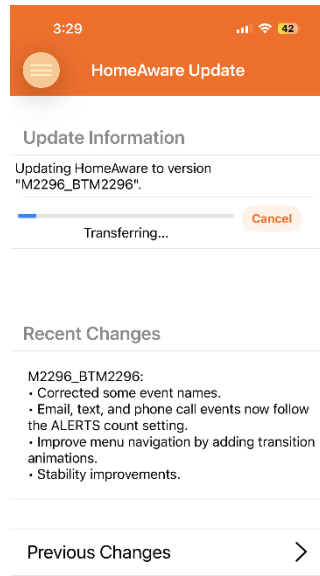

App Navigation & Settings

Tap the Menu icon (three horizontal lines), in the top-left corner of the app, to access configuration options (**Image 1/Image 2**):

- General Configuration Configure your main unit, set notifications, and test mode (**Image 3**).
- Alarm Clock Set Alarm 1 and Alarm 2 when needed (**Image 4**).
- Accessories See what add-on devices are linked to the main unit. (**Image 2**).
- Bluetooth Manage Bluetooth pairing and connections (**Image 2**).
- Wi-Fi Required only when subscribed to the HomeAware® II AlwaysAware Service (**Image 2**).
- HomeAware® Update Check for and install future software updates (**Image 2**).

Image 1



Image 2

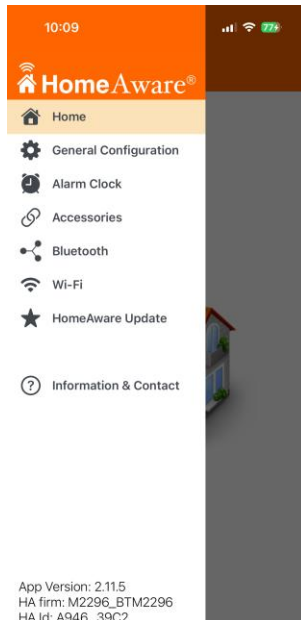


Image 3


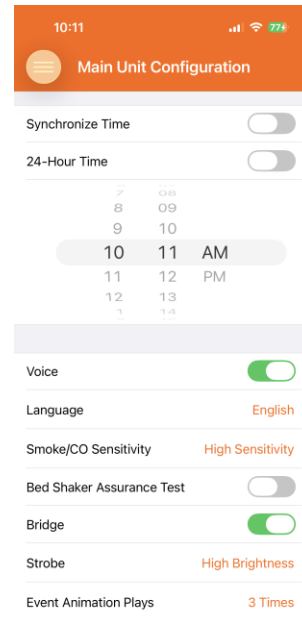


Image 4

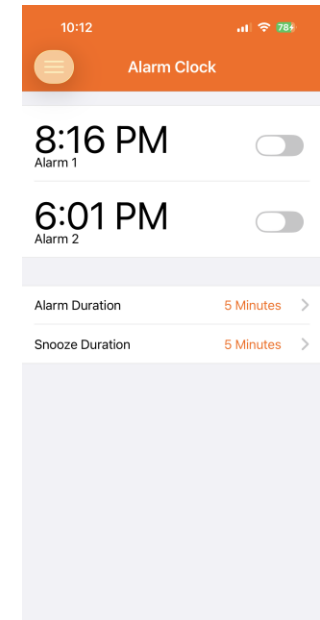

For additional information refer to the user guides provided or sonicalert.com.

Linking the HA360SSBCK Baby Cry to Your HomeAware® II Main Unit

1. Press **SET UP** button on the main unit, and the word **LINK** will be shown on the display, press the **ENTER** button. **LINK** will begin blinking (**Image 1**).
2. Press and hold down the **LINK** button on the back of your baby cry transmitter for about one second (**Image 2**). The red LED on the front of the baby cry transmitter will light up (**Image 3**). Release the button.
3. Upon successful connection, the red LED on the transmitter will flash 2 times, then turn off. The main unit display will briefly show DONE and return to the display time. Your baby cry is now connected and ready to test and use.

Sensitivity Switch

You can adjust the sensitivity switch of the baby cry transmitter (**Image 2**). There are three levels to choose from, ranging from HI (most sensitive) to LO (least sensitive). If you are not picking up the sound you need to be alerted to, simply move the sensitivity switch to a higher setting. If you have set this setting to HI and you are still not picking up the sound, try moving the transmitter closer to the sound.

Image 1



Image 2


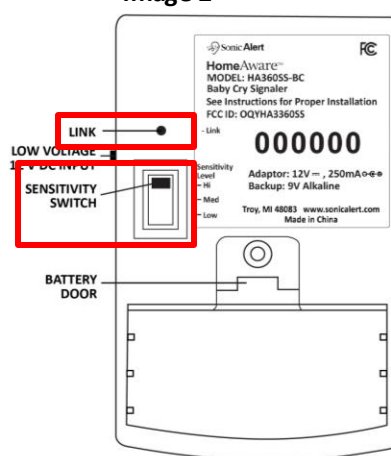


Image 3

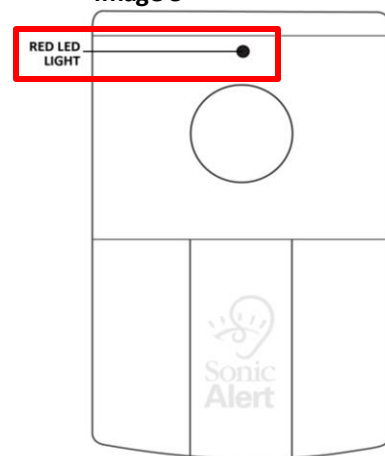

Setting Up the HA360BDB2.1 Blink and Charging the Battery

Note: Please be careful when removing and replacing the blink unit to minimize damage to the springs on the bracket. Place the top of the Blink into the top of the bracket and then gently push the blink on the bottom into place on the bracket until you hear it snap into place (**Image 1**).

Begin by charging the units battery fully (approximately 2.5 hours). With the unit in its cradle, plug it into an AC outlet to charge the battery. **Note:** Your Blink will start flashing yellow when the battery life is less than 20% (**Image 1**).


Linking your HA360BDB2.1 as a Receiver of the HomeAware® Main Unit

Remove the blink unit from the bracket. Set the Main / Receiver switch to Receiver (**Image 2**). Press the **SET UP** button on the main unit and the word **LINK** will be shown on the display. Press the **LINK** button on the blink unit using a paper clip or small tool. It will glow purple for one second to confirm that it is linked to the main unit.

Image 1



Image 2

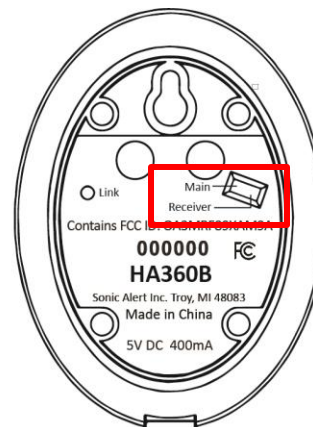

For additional information refer to the user guides provided or sonicalert.com.

Setting Up the HA360DB Blink Doorbell

The HomeAware® HA360DB Doorbell Transmitter will alert you to someone at the door via the HomeAware® II Main Unit. Once the main unit receives the signal from the doorbell transmitter, it will then send a signal to all HomeAware® remote receivers. This transmitter requires no wires and can be installed in seconds.

Install Batteries

The HomeAware® Doorbell Transmitter comes with two #357 silver oxide long lasting batteries that need to be installed into the bottom of the unit (**Image 1**). Once installed, the red light should light when the button is pushed (**Image 2**). If the light does not show, check that the batteries are properly installed and try again.

Image 1

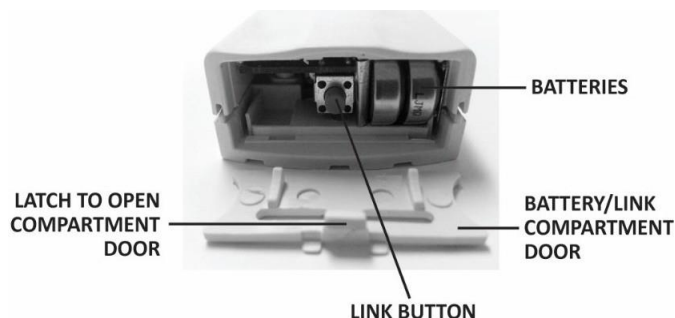


Image 2



Linking Doorbell Transmitter to HomeAware® II Main Unit

It is best to do the **LINK** procedure in the same room as close as possible to the HomeAware® II Main Unit.

To link the doorbell to your HomeAware® II Main Unit follow the steps below.

1. Press **SET UP** button on the main unit and the word **LINK** will be shown on the display, press **ENTER**. **LINK** will begin blinking (**Image 1**).
2. Press the **LINK** button on the bottom of your doorbell unit (**Image 2**). A red blinking dot will start blinking on top of the doorbell (**Image 3**). **DONE** will scroll across screen when linked.

Image 1



Image 2

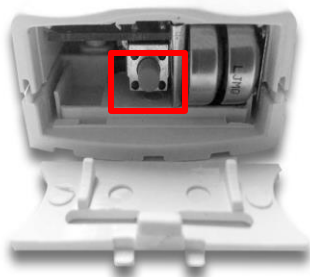


Image 3



Note: Please refer to the included user guide for step-by-step placement and installation instructions.