



HA360DPK – Disaster Preparedness Kit

Setting Up Your HomeAware® II Main Unit for the First Time

Remove all contents of the box. (HA360M-II - Main Unit, HA360V-II - Bed Shaker, HA360SA2.1 - Security Alert, Midland NOAA Weather Radio, 3MM Cable and Quick Start Guide).

Plugging in Your Main Unit and Connecting the Bed Shaker

1. Remove the back cover: Press down as shown in **Image 1**. (**Note:** this may require significant force the first time).
2. Connect the bed shaker: Plug the bed shaker cable into the BED SHAKER 5V port (**Image 2**).
3. Connect power: Plug the power cable into the DC IN port (**Image 2**).
4. Plug into the outlet: Insert the power supply into a 120V outlet.
5. Reattach the cover: Lift the unit to clear the cables, place the cover flush against the cavity, and press up as indicated in **Image 3**.
6. Verify installation: Ensure the cover is fully seated as shown in (**Image 4**).

Image 1



Image 2



Image 3



Image 4



Installing the Rechargeable Battery

1. Remove the battery cover: Slide the cover open while lifting the tab with your thumb, as shown in **Image 1** (a screwdriver can assist).
2. Access the battery: Remove the cover to reveal the Li-ion battery (**Image 2**).
3. Plug in the battery: Connect the battery cable (**Image 3**). Tip: Remove the battery from the compartment first for easier access (needle-nose pliers can help).
4. Position the battery: Place the battery back into the compartment and tuck any excess wire into the gap (**Image 4**).
5. Align the cover: Place the cover over the battery about a quarter-inch from the fully closed position (**Image 5**).
6. Secure the cover: Press down while sliding the cover to the right so the nubs engage the holes, until the left tab snaps into place (**Image 6**).

Image 1



Image 2



Image 3

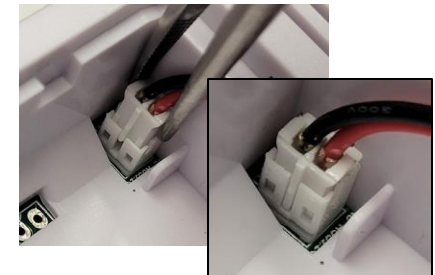


Image 4

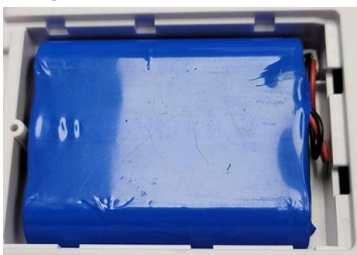


Image 5



Image 6



For additional information refer to the user guides provided or sonicalert.com.

Setting the Time of Day

Note: The time can also be set using the HomeAware® App. If you prefer to use this method, please skip this section and refer to the HomeAware® App instructions below.

1. Press the **TIME SET** button on your HomeAware® II Main Unit (**Image 1**). Blinking red dots shown on the display indicate time set mode has been activated.
2. Press the blue **HOUR** buttons up or down and the blue **MINUTES** buttons up or down to set the desired time (**Image 2**). **Note:** The PM indicator is located on the top left-hand side of the screen.
3. Press the **ENTER** button when you are done (**Image 3**). The display dots will stop blinking to indicate the time has been set.

Image 1



Image 2



Image 3



Testing Your SMOKE and CO Alerts

Note: It is important to test your smoke alarms/CO detectors **weekly** to confirm that they continue to correctly trigger the main unit. Confirm that the strobe, bed shaker, audio, and visual alerts are all operating correctly.

To test for the first time:

1. Verify that your HomeAware® II Main Unit and smoke alarm or carbon monoxide detector are installed in their permanent, everyday locations.
2. Test your smoke alarm or carbon monoxide detector using your manufacturer's instructions.
3. Ensure your smoke alarm or CO detector displays SMOKE or CO, verifying that it "heard" the alarm.
4. If your main unit does not display SMOKE or CO, check that no objects are between the alarm and your main unit, and try again.
5. If it is still not triggering, refer to the HomeAware® II user guide included in your box (also available on sonicalert.com) for instructions on how to modify your device's sensitivity settings.

HomeAware® App Installation & Setup Guide

Note: The HomeAware® App is required to receive incoming phone call/text alerts on your smartphone, manage firmware updates, or use the HomeAware® II Subscription Service. It is not required for the smoke and carbon monoxide (CO) alert functions on the HA360M-II Main Unit.

Download HomeAware® App & Initial Permissions

1. Download the App: Open the Apple App Store® (iOS) or Google Play™ Store (Android) on your smartphone and search for "HomeAware". The correct app will have the house icon shown below. Follow the instructions to install it (**Image 1**).
2. Open the App & Grant Permissions:
 - When prompted Allow "HomeAware" to find Bluetooth devices?, tap **Allow** (**Image 2**).
 - When prompted "HomeAware" would like to send you notifications", tap **Allow** (**Image 3**).

Image 1



Image 2


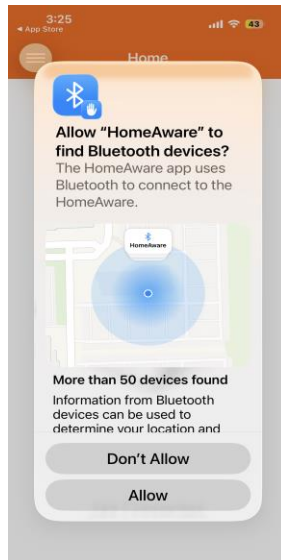


Image 3

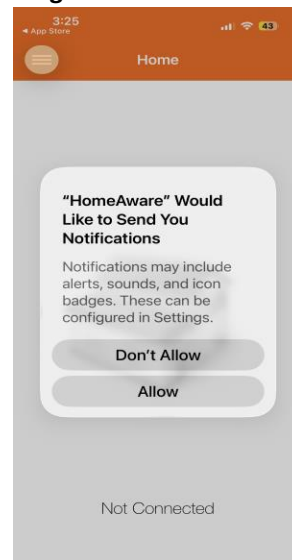

Pairing Your Smartphone

1. Pairing: Tap **Pair with your HomeAware®** inside the app (**Image 1**).
2. Initiate Pairing and Linking: Follow steps and tap **OK** (**Image 2**).
3. Confirm Bluetooth Pairing Request: Follow the instructions on the screen to confirm the code and tap **Pair** (**Image 3**).
4. Enable System Notifications: Tap **Allow** (**Image 4**).

Your phone is now connected. The red BT indicator light will turn on and stay lit on your main unit. You will now receive notifications for calls, texts, and emails on your main unit and HomeAware® alerts directly on your phone.

Image 1

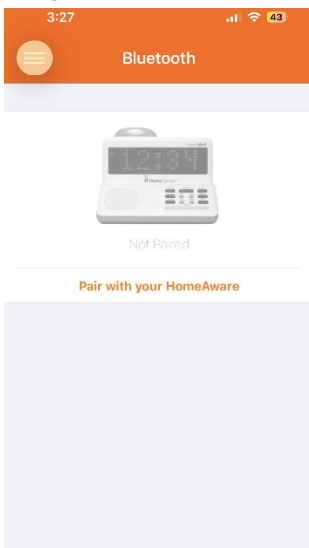


Image 2

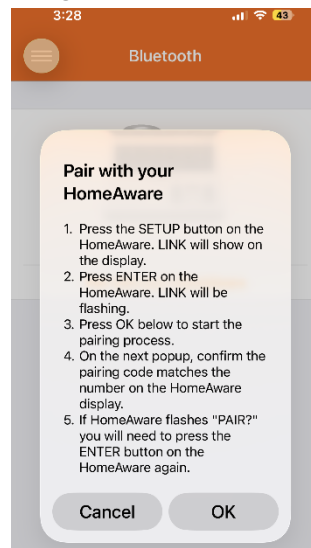


Image 3


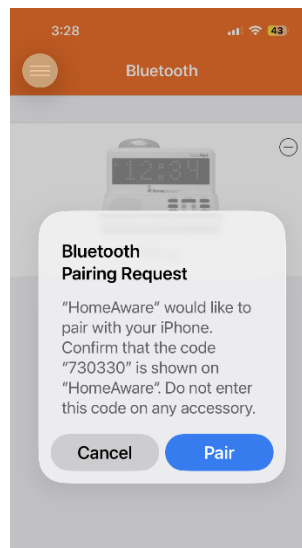


Image 4

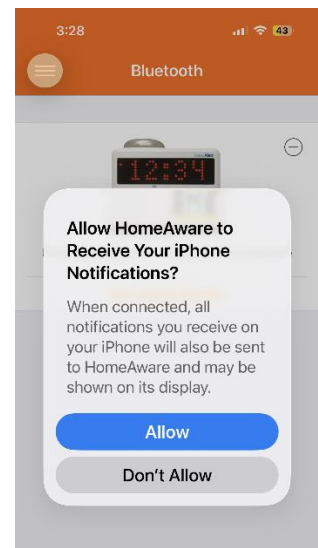

For additional information refer to the user guides provided or sonicalert.com.

Updating Firmware (If Prompted)

Note: Periodic firmware updates will be sent to your main unit to ensure your device is up-to-date and performing optimally. All updates must be initiated through your app.

1. Tap **Start Update (Image 1)**.
2. Your app will show you how the update is progressing and let you know when it is completed (**Image 2**). **Note:** Your main unit's display will also show the update progress and display **DONE** when completed.

Image 1


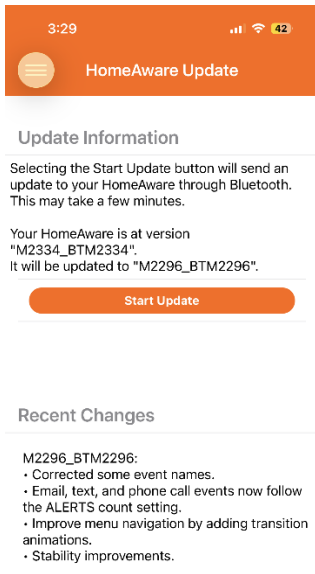


Image 2

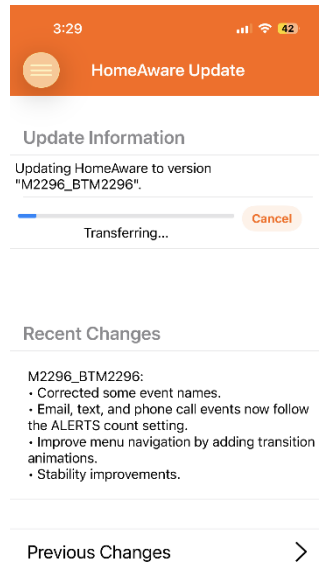

App Navigation & Settings

Tap the Menu icon (three horizontal lines), in the top-left corner of the app, to access configuration options (**Image 1/Image 2**):

- General Configuration Configure your main unit, set notifications, and test mode (**Image 3**).
- Alarm Clock Set Alarm 1 and Alarm 2 when needed (**Image 4**).
- Accessories See what add-on devices are linked to the main unit. (**Image 2**).
- Bluetooth Manage Bluetooth pairing and connections (**Image 2**).
- Wi-Fi Required only when subscribed to the HomeAware® II AlwaysAware Service (**Image 2**).
- HomeAware® Update Check for and install future software updates (**Image 2**).

Image 1



Image 2

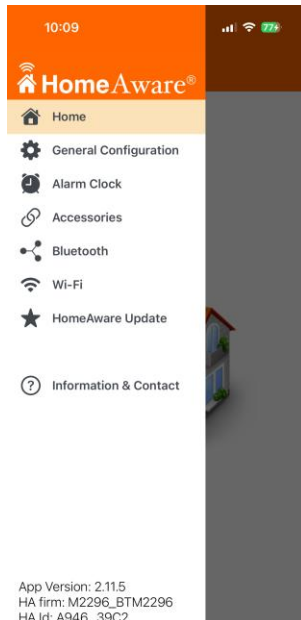


Image 3


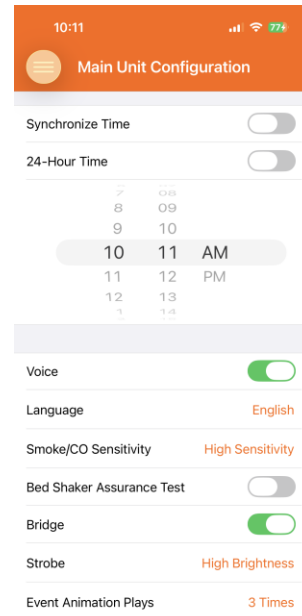


Image 4

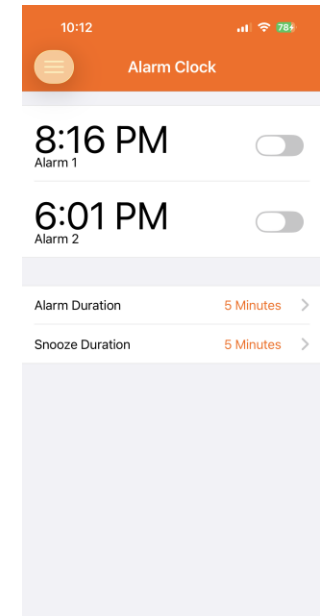

For additional information refer to the user guides provided or sonicalert.com.

Setting up your HA360SA2.1 for the First Time – Installing the Batteries

1. The HomeAware® Security Alert Transmitter comes with two #357 silver oxide lasting batteries that need to be installed into the bottom of the unit (**Image 1**).
2. Once installed, the red light should light when the button is pushed (**Image 2**). If the light does not show, check the batteries are properly installed and try again.

Image 1

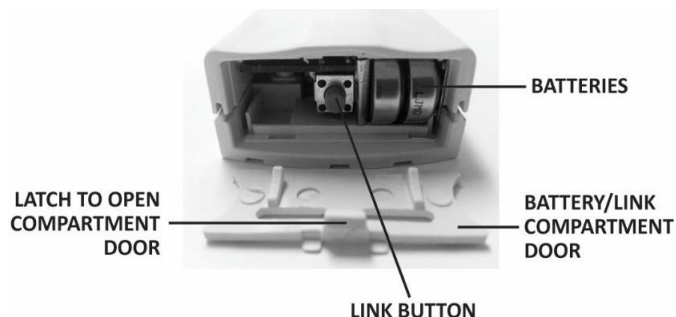


Image 2



Linking the HA360SA2.1 to the Main Unit


It is best to do the LINK procedure in the same room as close as possible to the HomeAware® Main Unit.

1. Press **SET UP** button on the main unit, and the word **LINK** will be shown on the display, press **ENTER** (**Image 1**). **LINK** will begin blinking.
2. Remove the cover on the bottom of the HA360SA2.1 and press and release the small black link button (**Image 2**). **PICK DEVICE** will be shown on the display.
3. Repeatedly pressing the blue **tone** button until **STORM** shows on the display, press **ENTER** (**Image 1**). **DONE** will scroll across the screen when linked.

Image 1



Image 2

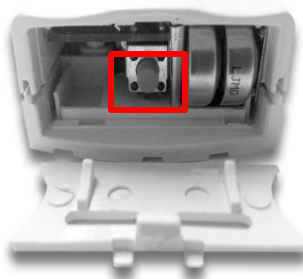

Connecting the HA360SA2.1 to your Midland NOAA Weather Radio

1. Plug the 3.5mm cable into the **EXTERNAL ALERT** port on the back of the Midland Weather Radio.
2. Plug the other end of 3.5mm cable into the outlet on the side of the HA360SA2.1 (**Image 1**).
3. There are three switch positions on the back of the HA360SA2.1. When using with the Midland NOAA Weather Radio the switch should be in the N.Open center position (**Image 2**).

Image 1



Image 2



SWITCH IN CENTER POSITION –N.Open


Setting up your Midland NOAA Weather Radio for the First Time

WR-120 Owner's Manual



Quick Start Instructions:

1. Set the **ON/OFF** switch located on the right side of the radio to the **ON** position.
2. Pull out antenna and extend to its full length.
3. Insert 3 AA batteries (not included).
4. Plug the AC Adapter into the **POWER** jack on the back of the radio and the other end into a standard outlet.
5. Follow the prompts on the display screen using **▲** and **▼** to move through the options and **SELECT** to choose the desired option.
 - The radio will first display **WELCOME**, and then **SET LANGUAGE**
 - To **SET LANGUAGE** press the **SELECT** button:
 - Choose your language by pressing **▲** or **▼**, then **SELECT**.
 - To **SET LOCATION** press the **SELECT** button:
 - Press **▲** or **▼** until **SINGLE** is displayed, then press **SELECT**.
 - To **SET COUNTRY** press **SELECT** to program your county for position 01:
 - Press **▲** or **▼** to choose your country, then press **SELECT**.
 - Press **▲** or **▼** to choose your state or province, then press **SELECT**.
 - Press **▲** or **▼** to choose your county or area, then press **SELECT**.
 - To **SET TIME** press the **SELECT** button:
 - Set the time using **▶ ▲ ▼ ◀** then press **SELECT**.
 - To **SET CHANNEL** press the **SELECT** button:
 - Tune the channel to the desired broadcast using **▲** or **▼**
 - To **SET VOLUME** press the **VOLUME UP** or **VOLUME DOWN** buttons.
6. To complete set-up, press the **SELECT** button.

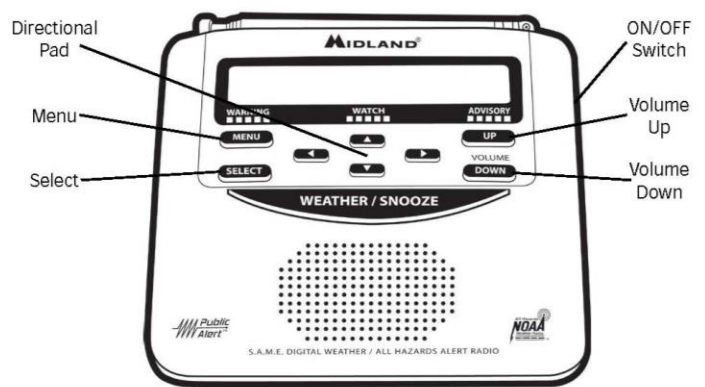

Note: For additional information refer to Midland NOAA Weather User Guide.

For additional information refer to the user guides provided or sonicalert.com.